



MANUAL TUMBLE DRYER

Soof
retreats

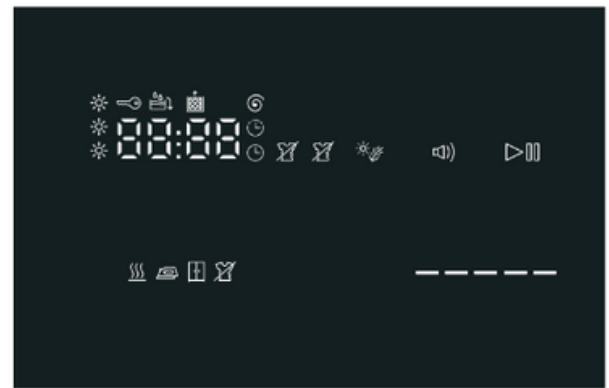

- 1. Program selector**
For switching on and off and choosing a program.
- 2. Programs**
- 3. Start button**
For starting or interrupting the program
- 4. Buttons**
- 5. Display with buttons**

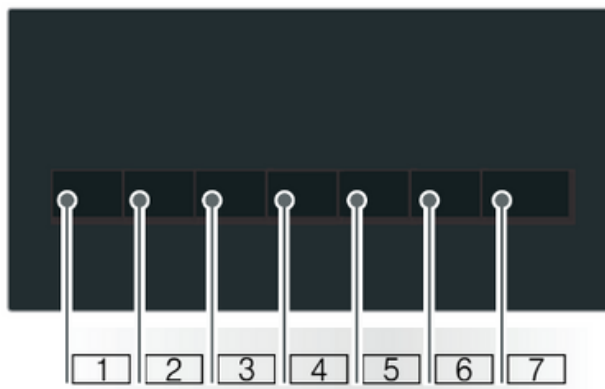

- 1. Select drying level
- 2. Select drying time
- 3. Ready in 'X' time choose
- 4. Anti-crease
- 5. Select gentle drying
- 6. Switch signal on or off
- 7. Select start / pause



Anti -crease selected



Fine adjustment of the drying degree



Time program selected



Ready in chosen time



Child lock selected



Spin speed selected



Selected gentle drying



Signal active



Start or pause selected

3h

Program delay in hours when selecting the ready in 'X' time.

1:27

Suspected program time in hours and minutes



Program progression; dry, iron dry, cupboard dry, anti-wrinkle; end and pause



Empty the condensation tank



Clean the fluff filter