


MANUAL DISHWASHER



Control panel

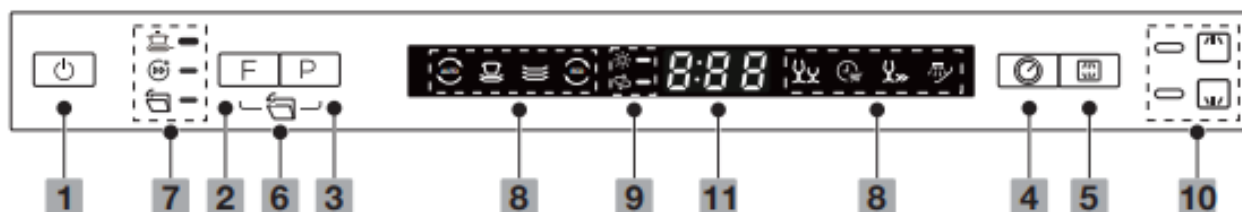

1. On/Off

Press this button to turn on the dishwasher. The display lights up.

2. Function

Press this button to select a function. The corresponding indicator lights up.

3. Programme

Select the appropriate wash programme. The indicator of the selected programme lights up.

4. Delayed start

Press this button to delay the start of the programme (up to 24 hours). One press of this button delays starting by one hour.

5. Alt

Press this button to clean the load in the selected basket. You do not have to wait until the entire dishwasher is filled. The corresponding indicator lights up.

6. Auto door open

After the wash cycle, the door opens automatically for better drying results. Press the 'Function' button and the 'Program' button simultaneously for 3 seconds to disable this function for the upcoming wash programme.

7. Function indicator



Extra clean

For washing very dirty or hard-to-clean dishes. This mode can only be used with Intensive, Universal, ECO, Glass and 90 min.



Express

Shortens the programme time. This mode can only be used with Intensive, Universal, ECO, Glass and 90 min.



Auto door open

This indicator appears every time the dishwasher is switched on. The indication disappears when the function is switched off.

MANUAL DISHWASHER



8. Program indicator



Auto

A wash programme with automatic detection for lightly, normally or heavily soiled dishes, with or without dried-on food residues. A sensor detects how dirty the water in the machine is and automatically adjusts the temperature and duration of the programme.



Intensive

Heavily soiled items, including cooking and frying pans. With dried-on food residues.



Universal

For normally soiled dishes, such as pans, plates and glasses and lightly soiled frying pans.



ECO

This is the standard programme suitable for normally soiled dishes, such as pans, plates and glasses and slightly dirty frying pans.



Glass

For lightly soiled dishes and glass



90min

For normally soiled loads that you want to wash quickly.



Quick

A shorter programme for lightly soiled dishes that do not require drying.



Soak

For rinsing dishes you want to wash later in the day.

9. Warning indicator



Rinse aid

If this indicator lights up, it means that the rinse aid in the dishwasher needs refilling.



Salt

If this indicator lights up, it means the salt in the dishwasher needs refilling.

MANUAL DISHWASHER



10. Alt indicator



Upstairs

When you select Up, only the dishes in the upper basket are cleaned.



Below

When you select Below, only the dishes in the lower basket are cleaned.

11. Display



Shows remaining time, delayed start time, error codes, and so on.