


MANUAL INDUCTION HOB & EXTRACTOR

Soof
retreats

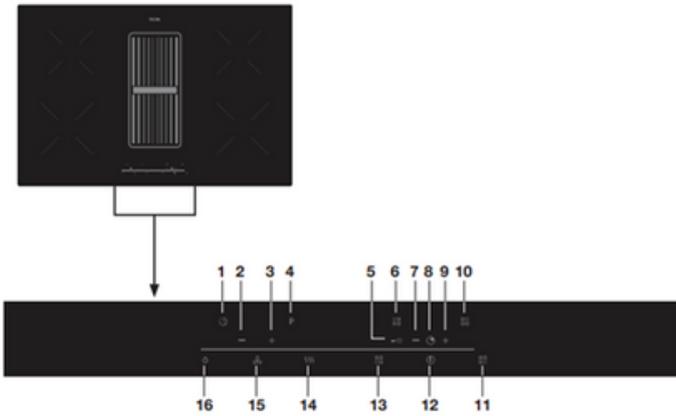

1. Timer function downdraft
2. Minus (-) downdraft extraction button
3. Plus-button (+) downdraft extraction
4. Downdraft power button
5. Child lock symbol
6. Display / button for rear left cooking zone
7. Button for lower induction power (-)
8. Induction timer symbol
9. Button for higher induction power (+)
10. Display / button for rear right cooking zone
11. Display / button for front right cooking zone
12. On-off button for induction hob
13. Display / key for front left cooking zone
14. Odour filter reset button
15. On-off button downdraft
16. Reset button grease filter

Operating the induction hob

Using the touch buttons


Place your fingertip flat on a touch button. There is no need to apply pressure. The touch buttons respond to a light touch with your fingertip. Operate the keys only with your finger.

1. Hold your finger on the power button for at least 2 seconds. Then all displays turn on. If you do not touch another button, the hob will switch off in a few seconds for safety reasons. The hob is in standby mode.

2. Press a cooking zone button.
 - Touch the button of the desired cooking zone.
 - The display shows 0.



3. Tap the minus (-) or plus (+) button to set the power level from 1 to P.

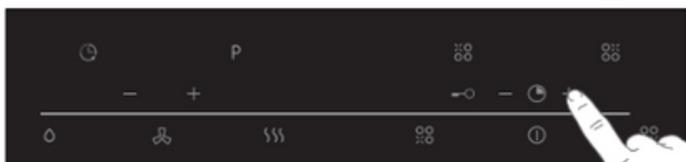

 **If the hob is not used for a few seconds, it will automatically switched off.**