

MANUAL COMBI MICROWAVE



Control panel

1. Function button
2. Power and weight test
3. Quick preheat button
4. On/off test
5. Temperature / auto menu button
6. Clock test
7. Start / pause button
8. Child lock
9. Selection button

Functions



Microwave



Oven

Modus



Microwave

Use the microwave function to cook and reheat food. Such as; vegetables, potatoes, rice, fish and meat.



Hot air

- With the hot air oven, you can the same way as in a traditional oven. The microwave is not used.
- You are advised to preheat the oven to heat to the correct temperature before placing the dish in the oven.



Grill with fan

Use this function to cook food evenly roast while giving them a brown crust.



Hot air + bottom heat

This function is used for baking pizza, moist pastries, fruit pies, puff pastry and shortcrust pastry.



Grill

The grill is ideally suited for preparing thin cuts of meat and fish.