

MANUAL REMOTE CONTROL SAMSUNG



Turn on TV & cast:

1. Click the **blue** button to turn the TV on (or off).
2. Click the **red STB** button to activate live TV & the delta box (behind the TV).
3. Use the **AV** button to switch between live TV and Chromecast.
4. Allows you to control the volume
5. Allows you to switch programmes

NOTE: make sure the Delta box (black box behind the TV) is on.

Red = off

Blue = on



MANUAL REMOTE CONTROL TOSHIBA



- 1: The **red** button switches the TV on and off
- 2: Switch between live TV and Chromecast/Netflix
- 3: Volume +/-
- 4: Is the Delta box (behind the TV) off? Click the **red STB** button on the **black** remote control.



MANUAL CHROMECAST



Connect to Wifi

Switch on your smartphone, tablet or laptop and make sure it is connected to the lodge's Wifi network.

Stream to the Chromecast


- Make sure your TV is switched on and the correct HDMI input signal is selected.

SAMSUNG remote control:

Click the AV button (3rd button) on your remote control to go to the Chromecast.

TOSHIBA remote control:

Click the 2nd button from the manual to go to the Chromecast.

- Open an app with Chromecast functionality. Examples include: Disney+, Netflix, NPO, Spotify and Youtube
- Play a video and press the Chromecast icon:  To start streaming