



SIROCO

Gemelos 22 apartments



Remote control air conditioning / heating



- 1 = ON / OFF
- 2 = TEMPERATURE LOWER
- 3 = TEMPERATURE HIGHER

In the summer, the air conditioning is set to cooling by default; in the winter to heating. In the period from summer to winter (and vice versa), you may have to change the position of the remote control. How do you do this?

Convert summer/winter mode*

1. Slide the flap under the display down.
2. Here you see a MODE button.
3. To set the remote control to winter mode, press the MODE button until you see the snowflake icon .
4. For summer mode, select the sun icon. 



**The type of remote control may vary per apartment. However, each remote control has a MODE button that allows you to switch between modes. If you have any problems, please report this to our technical staff by filling in [this form](#) >>*

In the interest of sustainability, we ask you to turn off the air conditioning/ heating when you leave the apartment. Thank you in advance!