


ENGLISH

Manual mode (MAN in display) for manual flame height adjustment.

- Press ▲ to turn on the fire (main burner) or to increase the flame height.
- Press ▼ to lower the flame or to go to pilot light.
- To incrementally increase or decrease the flame height, lightly tap the up or down button.
- The "send" symbol appears in the top left corner of the display when either of the two large buttons is pressed.

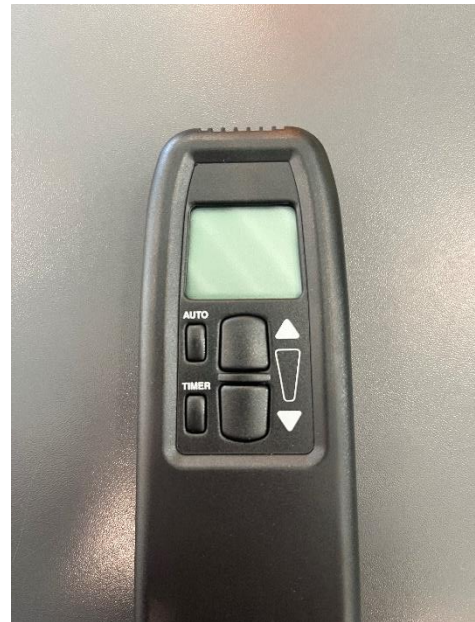

*If you see no pilot light at all, you can call reception on 0880708150. In this case, technical service will have to come to you.

*It is also possible that the batteries of the remote control are dead. You can get new batteries at reception.