

Climat control duinvilla's

Temperature

Each room downstairs has a thermostat to set the floor heating

Control buttons ventilation

1. Bathroom downstairs

Next to the light switch of the bathroom downstairs is a button that operates the ventilation

Push on: system ventilates on maximum

Push off: system goes to the position that is set in livingroom

2. Livingroom

Entering the livingroom there is a row of switches mounted on the wall. The rotary button is for setting the level of the ventilation

Position 1: ventilation low

Position 2: ventilation medium

Position 3: ventilation high

Notice

When switch in bathroom is on, the position of ventilation is "high", even when the rotary button in living room is set on position 1.

When system makes too much noise:

1. Turn switch in bathroom on position "OFF"

2. Set rotary button in living room on "POSITION 1"

When this fails you can unplug the power connector in the storeroom