





Induction hob

Control panel

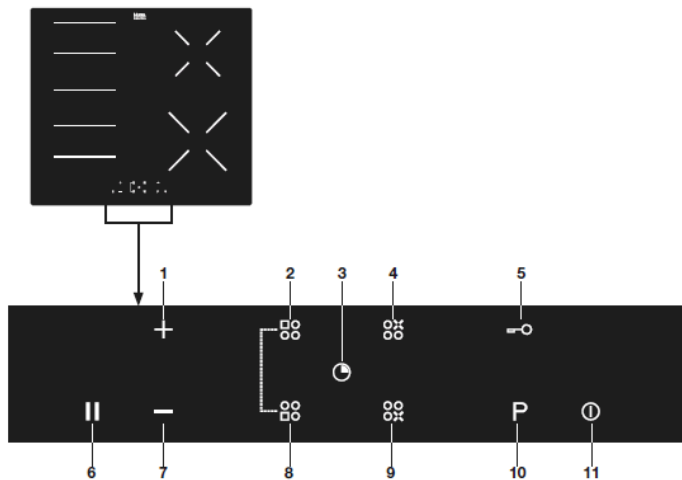

1. Plus '+' key
2. Cooking zone left back selection key
3. Timer key
4. Cooking zone right back selection key
5. Lock key
6. Pause key
7. Minus '-' key
8. Cooking zone left front selection key
9. Cooking zone right front selection key
10. Boost key
11. On/off key

Function	Key(s) to use	Description
Bridge	Touch the two Bridge cooking zone selection keys simultaneously	<p>The Bridge cooking zones can be linked to each other. This creates one large zone that can be used for a large fish pan or one large cooking pan.</p> <ul style="list-style-type: none"> If the zones are linked, they cannot be set to boost. Use a (fish)pan where at least one of the centre/middle positions of the Bridge zones is covered.
Boost		<p>You can boost function to cook max. 8 minutes at the highest power level. The boost function can only be activated if it is applicable with the cooking zone selected. If the boost function is active, an P is flashing alternately with the power level on the corresponding display.</p>
Cooking function	2x 	<p>You can use this function to boil water and keep the temperature close to the boiling point. If the cooking is activated, an b appears on the corresponding display. The hob gives an acoustic signal to indicate that the water is boiling and is being kept on the boil</p>
Baking function	3x 	<p>You can use this function to heat up oil to 160 °C. If the baking function is activated, an F appears on the corresponding display. The hob gives an acoustic signal to indicate that the oil is ready for baking.</p>

Lock mode


Child lock mode activate

Switch on the hob.

Touch the plus (+) and minus (-) key simulataneously until you hear a audio signal.

Touch the plus (+) key again.

- The cooking zone displays show the child lock symbols.
- The child lock mode is activated.
- For every startup touch the plus (+) and minus (-) key simuntaneously until you hear an audio signal. You can use the hob until you switch off the hob with the on/off key.

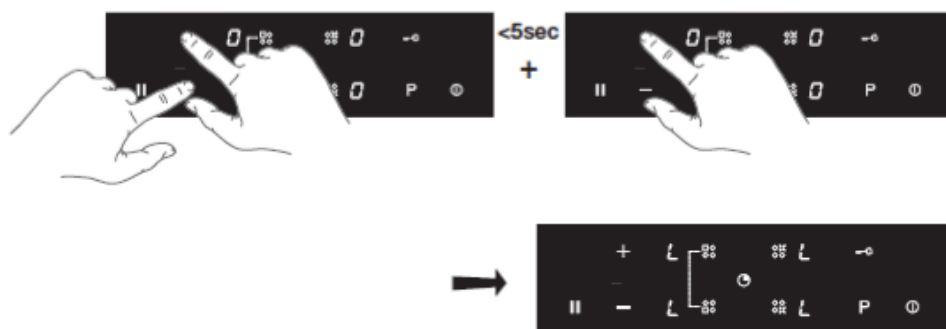

Child lock mode deactivate

Touch and hold the On/Off key until you hear an audio signal.

- The cooking zone displays show the child lock symbols.

Touch the plus (+) and minus (-) key simuntaneously until you hear an audio signal.

Touc the minus (-) key again.

The cooking zone display will show zero (0).

The child lock mode is de-activated.