

Samsung tv and remote

- We provide digital channels
- No Smart TV functionality
- No streaming or internet functionality

Using Remote Control

The descriptions in this manual are based in the buttons on the remote control. Please read this manual carefully and use the TV correctly. To replace the batteries, open the battery cover, replace batteries (1.5 V AAA) matching the + and - ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation action in reverse.







 





Make sure to point the remote towards the remote control sensor on the TV.

(Depending on model)



Some buttons and services may not be provided depending on models or regions.

*** To use the buttons, press and hold for more than 3 seconds.**

 Power	Turns the TV on or off.
Tv/radio	Selects radio, TV and DTV programme.
Subtitle	Recalls your preferred subtitle in digital mode
AD	Audio descriptions function will be enabled
 RATIO	Resizes an image
 INPUT	Changes the input source
Number buttons	Enters numbers
List	Accesses the saved programmes list
Q. view	Returns to the previously viewed programme
+/-	Adjust the volume level
FAV	Accesses your favourite programme list
GUIDE	Show programme guide
 MUTE	Mutes all sounds
 MUTE	Accesses the (Accessability) menu
 P	Scrolls through the saved programmes
 PAGE	Goes to the previous or next screen
TELETEXT BUTTONS	These buttons are used for teletext
 HOME	Accesses the Home menu
 SETTINGS	Accesses the Settings menu
Q MENU	Accesses the Quick menus
NAVIGATION	Scrolls through menus or options
 OK	Selects menus or options and confirms your input
BACK	Return to the previous level
EXIT	Clears on-screen displays and returns to TV viewing
 INFO	Gives the information of the current programme and screen
REC	This function is not supported
CONTROL BUTTONS	Control media contents
	These access special functions in some menus

Troubleshooting channels are missing or can't see any channel

First make sure the "input" is set on "ANTENNA", when this fails

1. Press "SETTINGS"
2. Select "AUTO TUNING"
3. Select "ANTENNA"
4. Check the box "DIGITAL ONLY"
5. Press "START"
6. When finished press "EXIT"