

Manual Nintendo Switch

Step 1

Turn on the television (photo 1 & 2):

You can turn the TV on by pressing the red button on the remote control. Please ensure the remote control is facing the TV's sensor when turning it on.

Step 2

Turn on the Nintendo Switch (photo 3):

On the upside of the TV, there should be a little black button. You can turn it on by pressing it. Once you've pressed the button, the Nintendo Switch will turn on. You can now get the controller.

Begin screen

Begin screen (photo 4):

You can now use the Nintendo Switch. This is the begin screen of the Nintendo Switch. Please now press the 'A' button on the controller of the Nintendo Switch.

Games

Games:


You can now proceed to select a game you'd wish to play on the Nintendo Switch. The available games we have are listed below.

Mario Kart Deluxe 8 - Overcooked Special Edition - Lego the Incredibles - Rayman Legends - Farm Together - My Little Pony

Controller

Controller (photo 5):

1. Takes a screenshot whilst playing.
2. HOME-button
3. Opens the home menu and stops the game.
The HOME-button flashes when you have a message.
4. L-button
5. R-button
6. Min button
7. Plus button
8. Left stick
9. Works like a button when you press it.
10. A/B/X/Y-buttons
11. Direction button
12. Right stick
13. Works like a button when you press it.
14. NFC-touch point
15. You can place your amiibo here to write and read.

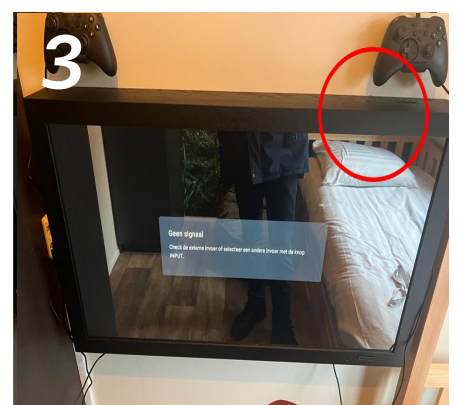

Manual Nintendo Switch

