








Manual Electric Fireplace

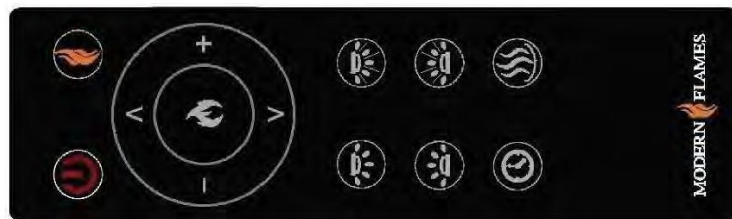






Button	Function	Action
	ON: Turns the control panel functions. Turns on the flame. OFF: Turns control panel functions. Switches the flame from.	<ol style="list-style-type: none"> Press once: Indicator light comes on. Power turns on. All functions switched on. Press again: Flame goes out. Fireplace goes to standby. All functions are switched off.
	HOME BUTTON: Returns the fireplace the default colour settings.	<ol style="list-style-type: none"> Press once: flame changes to flame style 1, colour yellow. Sintel bed and downlight change to orange. Flame speed changes to standard and noise level changes to low.
	FLAME BUTTON: Toggles between flame styles and colours. Δ: Scrolls up between settings of current flame styles. v: Scrolls down between settings of current flame styles. +: Increases the flame speed of the current flame style and colour. --: Decreases the flame speed of the current flame style and colour. NOTE: This fireplace has a flame memory function.	<ol style="list-style-type: none"> Press flame button once: Flame switches to next flame style in the sequence Press flame button again until desired style is reached. A total of three flame styles. Note: Press and hold for 5 seconds to enable Wi-Fi pairing mode. Enable Press Δ once: Goes to the next preset of the current flame style. Press Δ again: until the desired preset is selected from 1C-2C-3C-4C-5C-6C. Press v once: Goes to the previous preset of the current flame style. Press v once: until the desired preset is selected from 6C-5C-4C-3C-2C-1C. Press the + button to increase the flame speed. Displayed: 01-02-03. Press the - button to decrease the flame speed. Displayed: 03-02-01.
	AUDIO BUTTON: Increases and decreases the sound level of the .	<ol style="list-style-type: none"> Press once: Changes the volume level. Press again to between volume settings. Volume settings: S0 - Off S1 - Low S2 - Medium S3 - High

	<p>DOWNLIGHT button: Scrolls through the downlight colours. NOTE: The downlight colour effect remains on until the on/off button is switched off. This fireplace has a memory function for downlight settings.</p>	<ol style="list-style-type: none"> 1. Press once: scrolls through downlight. 2. Press again until the desired colour is reached. A total of ten colours and one fade modus. 01-02-03-04-05-06-07-08-09-10-11 NOTE: Press and hold for 5 seconds to enable night light mode.
	<p>DOWNLIGHT BRIGHTNESS KNOB: Makes downlight weaker or brighter. NOTE: The brightness of the LED downlight remains on until the power button is turned off.</p>	<ol style="list-style-type: none"> 1. Press once: Brightness becomes active. 2. Press again until the desired setting is reached. A total of 5 levels. From L4 - L3 - L2 - L1 - L0 (out)
	<p>SINTELBED BUTTON: Scrolls through the cinder bed colours. NOTE: The colour effect remains on until the power button is turned off. This fireplace has a memory function for ember bed settings.</p>	<ol style="list-style-type: none"> 1. Press once: switches cinder bed. 2. Press again until the desired colour is reached. A total of ten colours and one fade mode. NOTE: Press and hold for 5 seconds to switch the flotsam/extras on and off.
	<p>SINTELBED HELDERHEAD button: Makes the ember bed light becomes weaker or brighter. NOTE: The brightness of the LED light remains on until the power button is switched off.</p>	<ol style="list-style-type: none"> 1. Press once: Brightness becomes active. 2. Press again until the desired setting is reached. A total of 5 levels. from E4 - E3 - E2 - E1 - E0 (off)
	<p>TIMER BUTTON: Controls the timer settings to switch off the fireplace at the selected time. Settings range from 30 min to 8 hours.</p>	<ol style="list-style-type: none"> 1. Press once: indicator light comes on. Timer is set to 0.5 hours by default. 2. Press again until the desired setting is reached. 00 (off)-30-1H-2H-3H-4H-5H-6H-7H-8H
	<p>HEATING BUTTON: Switches the heating on and off. NOTE: The heater only works when the flame is on. If the flame is off, the heater will not turn on. NOTE: To overheating, the fireplace fan blows cool air for 8-10 seconds after the fireplace is switched off.</p>	<ol style="list-style-type: none"> 1. Press once: Turns on heating and fan. 2. Additional presses: Scrolls through heating settings. Settings H0 - Heating and fan off F - Fan only H1 - Low heating H2 - High heating <p>NOTE: Press and hold the heater button for 5 seconds to lock/unlock the fireplace and thermostat. H0 is displayed when .</p>

Operation - Touch control panel



Button	Function	Action
	ON: Turns on the control panel functions. Turns on the flame. OFF: Turns off the control panel functions. Turns off the flame.	<ol style="list-style-type: none"> 1. Press once: indicator light comes on. Power turns on. All functions switched on. 2. Press again: The flame goes out. Fireplace goes to standby. All functions are switched off. 3. CAUTION: Press and hold for 5 seconds: Places the fireplace in remote control pairing mode. Displays P1 during pairing.
	FLAME BUTTON: Switch between flame settings. NOTE: The colour effect remains on until the power button is turned off. This fireplace has a memory function for flame settings.	<ol style="list-style-type: none"> 1. Press once: Flame colour lights . 2. Press again until the desired colour is reached. A total of three flame styles with six colours for each . <p>NOTE: and hold for 5 seconds to connect to the app.</p>
	DOWNLIGHT button: Scrolls through the downlight colours. NOTE: The downlight colour effect remains on until the on/off button is switched off. This fireplace has a memory function for downlight settings.	<ol style="list-style-type: none"> 1. Press once: Change the colour of the downlight. 2. Press again until the desired colour is reached. A total of ten colours and one fade mode.01-02-03-04-05-06-07-08-09-10-11 <p>NOTE: Press and hold for 5 seconds to switch night light mode on/off.</p>
	SINTELBED BUTTON: Scrolls through the cinder bed colours. NOTE: The colour effect remains on until the power button is turned off. This fireplace has a memory function for ember bed settings.	<ol style="list-style-type: none"> 1. Press once: switches cinder bed. 2. Press again until the desired colour is reached. A total of ten colours and one fade mode.01-02-03-04-05-06-07-08-09-10-11 <p>NOTE: Press and hold for 5 seconds to turn the flotation/extras on and off.</p>
	HEATING BUTTON: Switches the heating on and off. NOTE: The heater only works when the flame is on. If the flame is off, the heater will not turn on. NOTE: To overheating, the fireplace fan blows cool air for 8-10 seconds after the fireplace is switched off.	<ol style="list-style-type: none"> 1. Press once: Turns on heating and fan. 2. Press again to through the heating settings. Settings: <p>H0 - Heating and fan off F - Fan only H1 - Low heating H2 - High heating</p> <p>NOTE: Press and hold the heater button for 5 seconds to lock/unlock the fireplace and thermostat. H0 is when locked.</p>



THERMOSTAT KNOB: switches fire on / off to keep the room at the selected temperature.
NOTE: Press the button for 5 seconds to switch between °C and °F.

1. Press once: Touch control panel indicator becomes active.
 2. Press again until the desired temperature is reached.
- Digital display shows settings 0-10. The table shows the corresponding temperatures.