


Manual Airco

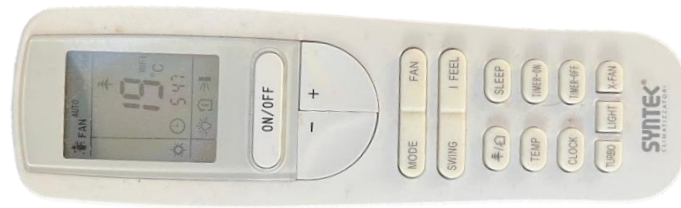

Additional air conditioning can be booked at reception for a fee. In addition, you pay a deposit for the remote control for operation. This deposit will be refunded upon return.










Manual Remote control Syntek





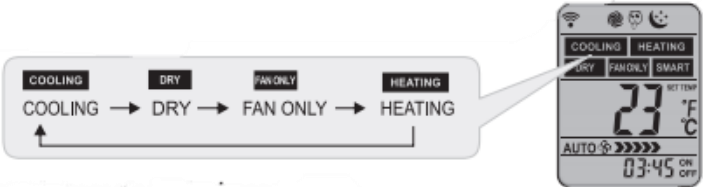

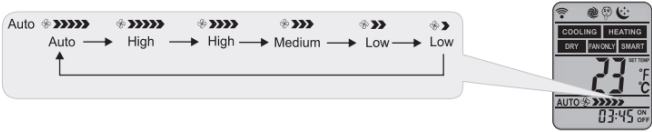







Button	Function	Instruction
ON/OFF	ON/OFF: Pressing this button starts or stops the device when in operation.	<ol style="list-style-type: none"> 1. Press once: The A/C turns on. All functions are switched on. 2. Press again: The A/C turns off. All functions are switched off.
-	Used to lower room temperature.	Press the temperature button once ↓ Decrease the temperature setting by 1 °C or 1 °F.
+	Used to increase room temperature.	Press the temperature button once ↑ Increase the temperature setting by 1 °C or 1 °F.
MODE	MODE BUTTON: Press this button to select the operation mode.	Press the MODE button one by one. The operation mode is changed one after another.
FAN	FAN BUTTON: Used to select fan speed in the order auto, higher, high, medium, low and lower	Press the FAN SPEED button one by one. The fan speed is changed one after another.
SWING	SWING BUTTON: Used to start or stop the movement of the vertical ventilation flap and set the desired up/down direction of airflow.	

Manual Remote control Gorenje


 


Knop	Funcie	Actie
	ON/OFF: Pressing this button starts or stops the device when in operation.	<ol style="list-style-type: none"> 1. Press once: The A/C turns on. All functions are switched on. 2. Press again: The A/C turns off. All functions are switched off. Druk nogmaals:
	MODE BUTTON: Press this button to select the operation mode.	<p>Press the MODE button one by one. The operation mode is changed one after another</p> 
	SLEEP BUTTON: Used to set or cancel sleep mode.	<p>Every time you press the SLEEP button. The SLEEP function is started.</p> <p>Press any button except the SLEEP button. The screen returns to the original mode.</p>
	FAN SPEED BUTTON: Used to select fan speed in the order auto, higher, high, medium, low and lower.	<p>Press the FAN SPEED button one by one. The fan speed is changed one after another.</p> 
 	TEMP : Used to increase or decrease the room temperature and adjust the timer.	<p>Press the temperature button once Decrease the temperature setting by 1 °C or 1 °F.</p> <p>Press the temperature button once Increase the temperature setting by 1 °C or 1 °F.</p>
	SUPER-BUTTON: Used to start or stop rapid cooling/heating.	<p>Press the SUPER button in cool, dry and fan-only mode. At high fan speed, the temperature is automatically set to 16 °C (61 °F).</p> <p>Press the SUPER button in heating mode.</p>

		With automatic fan speed, the temperature is automatically set to 30 °C (86 °F).
	SWING BUTTON: Used to start or stop the movement of the vertical ventilation flap and set the desired up/down direction of airflow.	<p>Using the remote control, you can set different flow angles or a specific angle as desired.</p> <p>Press the SWING button once. The vertical ventilation flap will automatically move up and down.</p> <p>Press the SWING button again. The ventilation flap will move to the desired angle.</p>
	ON TIMER BUTTON: Used to switch the timer on or off.	<p>Press the ON TIMER button. '12:00 ON' flashes on the LCD.</p> <p>Press on  or  Once to increase or decrease the time setting by 1 minute. Once and a half to increase or decrease the time setting by 10 minutes. For a longer time to increase or decrease the time by 1 hour. After the set timer is displayed for 5 seconds, the clock is displayed on the LCD screen of the remote control instead of the set timer.</p> <p>Press the ON TIMER button. You hear a 'beep' and the indicator disappears, the time-on mode is cancelled.</p>
	QUIET BUTTON: Used to switch Quiet Mode on or off.	<p>In this mode, the air conditioner operates with low noise performance due to low compressor frequency and low fan speed. This mode is only available for inverter models.</p> <p>Press the MODE, FAN SPEED, SMART, SUPER, ECONOMY or ON/OFF button to cancel QUIET mode.</p>
	SWING BUTTON: Used to start or stop the movement of the horizontal blind and set the desired left/right airflow direction.	<p>Using the remote control, you can set different flow angles or a specific angle as desired.</p> <p>Press the SWING button once. The horizontal ventilation flap automatically moves left and right.</p> <p>Press the SWING button again. The ventilation flap moves to the desired angle.</p>
	OFF TIMER BUTTON: Used to turn the timer on or off.	-
	SMART button (invalid for multi-system): Used to activate fuzzy logic directly when the device is on	<p>Press the SMART button. SMART mode is activated immediately when the unit is switched on. Temperature and fan speed are set automatically based on the current room temperature. Press the MODE button. SMART mode is cancelled.</p>

	<p>DIMMER BUTTON: When this button is pressed, all screens of the indoor unit are closed. Press any button to resume the display.</p> <p>CLOCK BUTTON: Used to set the current time</p>	<p>Press the CLOCK button once for about 5 seconds. The time flashes on the LCD screen</p> <p>Press on  or  once to increase or decrease the time setting by 1 minute. One and a half seconds to increase or decrease the time setting by 10 minutes. For a longer time to increase or decrease the time setting by 1 hour.</p> <p>Press the CLOCK button again. The real time is set</p>
	<p>ECONOMY BUTTON: Used to set or cancel economy mode.</p> <p>IFEEL BUTTON: Press to set the IFEEL mode. In IFEEL mode, the air conditioner operates based on the temperature sensor in the remote control instead of on the machine.</p>	<p>Press the IFEEL button once for about 5 seconds. The broadcast signal appears on the display, The IFEEL function is started.</p> <p>Press the IFEEL button again for about 5 seconds. The IFEEL function is switched off.</p>

Indication symbols on LCD:

 COOLING Cooling indicator	 DRY Dry indicator	 FAN ONLY Fan only indicator	 HEATING Heating indicator	 SMART Smart indicator
Auto  Auto fan speed	 Higher fan speed	 High fan speed	 Medium fan speed	 Low fan speed
 Lower fan speed	 Quiet indicator	 Economy indicator	 Super indicator	 Sleep indicator
 IFEEL	 Display temperature	 ON Display set timer		
 Auto-clean indicator		 OFF Display current time		 8°C Heat indicator