

**UCOSAN (2)**  
**Bubble bath/Whirlpool**  
**OPERATING MANUAL**

## WARNING

- Very young children (aged from 0 up to and including 3 years) should not use the whirlpool baths.
- Young children (aged from 3 years and younger than 8 years) should not use the whirlpool baths without continuous supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

## USAGE

- 1) Fill the bath with water with the desired temperature.
- 2) Wait until the water level is that high, that the red light (Fig. 1) turns green.



Fig. 1

- 3) Start or stop the bubble effect with the remote control by pressing the "ON" / "OFF" key.
- 4) Arrange the intensity with the "INTENSITY" control button



"INTENSITY" + HIGH – LOW

"ON" / "OFF"