



LG Wall Mounted Air Conditioner Owner's Manual

[Home](#) » [LG](#) » LG Wall Mounted Air Conditioner Owner's Manual 



Contents

1 LG Wall Mounted Air Conditioner Owner's Manual

2 SAFETY INSTRUCTIONS

3 OPERATION

3.1 Notes for Operation

3.2 Parts and Functions

3.3 Wireless Remote Control

3.4 Restarting the Air Conditioner Automatically

3.5 Using the Mode Function

3.6 Using the Jet Mode Function

3.7 Using the Fan Speed Function

3.8 Using the Air Flow Direction Function

4 Setting the On/Off Timer

4.1 Using the Sleep Function (Optional)

4.2 Using the Simple Timer Function (Optional)

4.3 Using the Energy Display Function (Optional)

4.4 Using the Light Off Function (Optional)

4.5 Using the Comfort Air Function (Optional)

4.6 Using the Energy Control Function (Optional)

4.7 Using UVnano Function (Optional)

4.8 Using Special Functions

5 SMART FUNCTIONS

6 MAINTENANCE

6.1 Clean the Air Filter

7 TROUBLESHOOTING

8 Documents / Resources

8.1 References

9 Related Posts

LG Wall Mounted Air Conditioner Owner's Manual



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

TYPE: WALL MOUNTED



MFL69780820
Rev.00_020921

www.lg.com

Copyright © 2021 LG Electronics Inc. All Rights Reserved

This manual may contain images or content different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

The following symbols are displayed on indoor and outdoor units. (for R32)



This symbol indicates that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposure to an external ignition source, there is a risk of fire.



This symbol indicates that the Operation Manual should be read carefully.



This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.



This symbol indicates that information is available such as the Operating Manual or Installation Manual.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Installation

- Do not install the air conditioner on an unstable surface or in a place where there is danger of it falling.
- Contact an authorized service center when installing or relocating the air conditioner.
- Install the panel and the cover of the control box safely.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane, paint thinner, etc., are stored.
- Make sure that the pipe and the power cable connecting the indoor and outdoor units are not pulled too tight when installing the air conditioner.
- Use standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not input air or gas into the system except with the specific refrigerant.
- Use non-flammable gas (nitrogen) to check for leak and to purge air; using compressed air or flammable gas may cause fire or explosion.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that

there is no force pulling the cable from the connection terminals. Improper or loose connections can cause heat generation or fire.

- Install dedicated electric outlet and circuit breaker before using the air conditioner.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.
- Keep any required ventilation openings clear of obstruction. (for R32)
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Do not install the unit in potentially explosive atmospheres.

Operation

- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Make sure that children do not climb on or hit the outdoor unit.
- Dispose of the batteries in a place where there is no danger of fire.
- Use only the refrigerant specified on the air conditioner label.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Contact an authorized service center when the air conditioner is submerged by flood waters.
- Do not use the air conditioner for an extended period of time in a small place without proper ventilation.
- In the event of a gas leak (such as Freon, propane gas, LP gas, etc.) ventilate sufficiently before using the air conditioner again.
- To clean the interior, contact an authorized service center or dealer. Using harsh detergents may cause corrosion or damage to the unit.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
- Do not block the inlet or outlet of air flow.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not place any objects on the power cable.
- Do not place a heater or other heating appliances near the power cable.
- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and should be replaced.
- Cut off the power supply immediately in the event of a blackout or a thunderstorm.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
- Do not touch refrigerant pipe, water pipe and any internal parts while the unit is operating or immediately after operation.

Maintenance

- Do not clean the appliance by spraying water directly onto the product.
- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

Technical Safety

- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification. (for R32)
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. (for R32)
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The appliance shall be installed in accordance with national wiring regulations.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- This appliance must be properly grounded to minimize risk of electric shock.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the earth wire to the power outlet cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the power outlet is grounded through house wiring.
- If you have any doubt whether the air conditioner is properly grounded, have the power outlet and circuit checked by a qualified electrician.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation. (for R32)
- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater). (for R32)
- The appliance shall be stored so as to prevent mechanical damage from occurring. (for R32)
- Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
- This appliance contains a UV-C lamp.
- When the appliances are damaged or need to be replaced, disconnect the power supply and contact the service center.
- Do not operate UV-C lamp outside of the appliance.
- Do not clean and touch air deflector during operation.
- Before opening doors and access panels bearing the ultraviolet radiation hazard symbol for the conducting user maintenance, it is recommended to disconnect the power.
- Read the maintenance instructions before opening the appliance.
- Appliances that are obviously damaged must not be operated.
- The appliance must be disconnected from the supply before replacing the UV-C lamp.



CAUTION

To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Exercise caution when unpacking or installing the air conditioner.
- Do not touch the leaking refrigerant during installation or repair.
- Transport the air conditioner with two or more people or use a forklift.
- Install the outdoor unit such that it is protected from direct sunlight. Do not place the indoor unit in a place where it is directly exposed to sunlight via the windows.
- Safely dispose of packing materials such as screws, nails, plastic bag or batteries using proper packaging after installation or repair.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbors. Failure to do so may result in conflict with the neighbors.

Operation

- Remove the batteries if the remote control is not to be used for an extended period of time.
- Make sure that the filter is installed before operating the air conditioner.
- Be sure to check if there is a refrigerant leak after installing or repairing the air conditioner.
- Do not place any object on the air conditioner.
- Never mix different types of batteries, or old and new batteries for the remote control.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin are exposed to the leaking battery fluid, wash off with clean water.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- If the leaking battery fluid has been swallowed, rinse the inside of the mouth thoroughly and consult a doctor.
- Do not drink the water drained from the air conditioner.
- Do not use the product for special purposes, such as preserving foods, works of art, and etc. It is an air conditioner for consumer purposes, not a precision refrigeration system. There is risk of damage or loss of property.
- Do not recharge or disassemble the batteries.

Maintenance

- Never touch the metal parts of the air conditioner when removing the air filter.
- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Never use strong cleaning agents or solvents when cleaning the air conditioner or spray water. Use a smooth

cloth.

OPERATION


Notes for Operation

Suggestion for Energy Saving

- Do not over-cool the space. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Open windows regularly for ventilation. The indoor air quality may deteriorate if the air conditioner is used for long durations.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or reduce the unit performance.


Parts and Functions

Indoor Unit

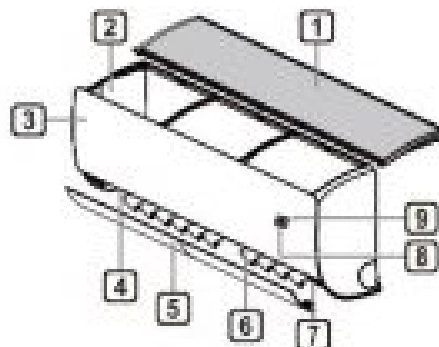

- | | |
|----------|---------------------------------|
| 1 | Air Filter |
| 2 | Air Intake |
| 3 | Front Cover |
| 4 | Air Outlet |
| 5 | Air Deflector (Horizontal Vane) |
| 6 | Air Deflector (Vertical Louver) |
| 7 | On/Off Button |
| 8 | Display |
| 9 | Signal Receiver |

Outdoor Unit

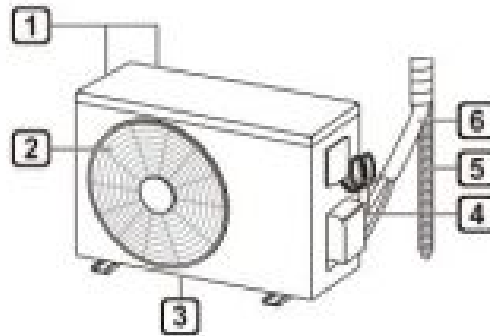

- 1** Air Intake Vents
- 2** Air Outlet Vents
- 3** Base Plate
- 4** Power Supply Cable
- 5** Drain Hose
- 6** Refrigerant Pipes

NOTE


- The number and location of operation lamps may vary according to the model of the air conditioner.
- The feature may be changed according to the type of model.

Wireless Remote Control

Inserting Batteries

If the display screen of the remote control begins to fade, replace the batteries. Insert AAA (1.5 V) batteries before using the remote control.

1 Remove the battery cover.

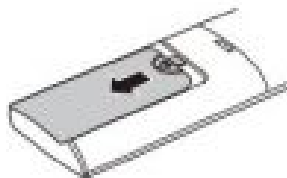


2 Insert the new batteries and make sure that the + and - terminals of the batteries are installed correctly.



Installing the Remote Control Holder


To protect the remote control, install the holder where there is no direct sunlight.

1. Choose a safe and easily accessible location.
2. Fix the holder by fastening 2 screws firmly with a screwdriver.

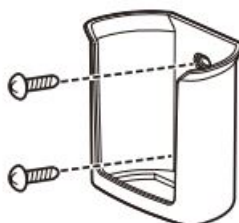




Operating Method

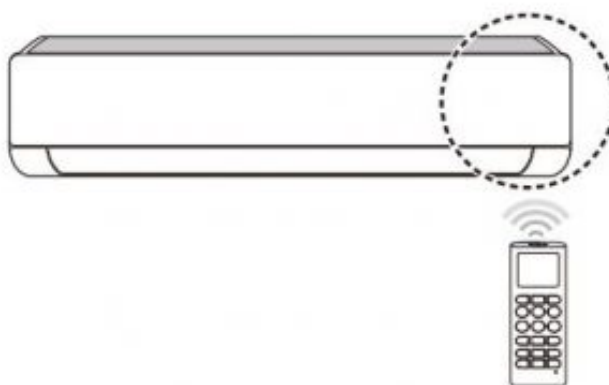Point the remote control towards the signal receiver at the right side of the air conditioner to operate it.



NOTE

- The remote control may operate other electronic devices if it is directed towards them. Make sure to point the remote control towards the air conditioner signal receiver.
- For proper operation, use a soft cloth to clean the signal transmitter and receiver.
- In case of a function not provided in the product, no buzzer sound occurs from the product when a button for such function on the remote control is pressed except for Air Flow Direction (, Energy Display (, Air Purification function ().

Setting the Current Time

- 1 Insert batteries.
 - The icon below blinks at the bottom of the display screen.



- 2 Press  or  button to select the minutes.
- 3 Press **Set/Cancel** button to finish.

NOTE

- The On/Off Timer is available after setting the current time.

Using the °C/°F Conversion Function (Optional)

This function changes unit between °C and °F


- Press and hold  button about 5 seconds.

Operating the Air Conditioner without the Remote Control


You can use the ON/OFF button of the indoor unit to operate the air conditioner when the remote control is unavailable.

1. Open the front cover (Type2) or horizontal vane (Type1).
2. Press the ON/OFF button.

Type1

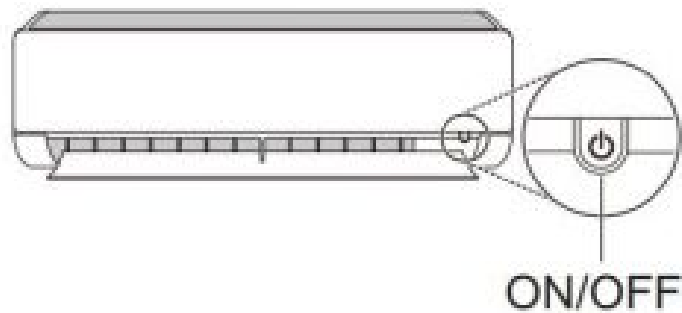

Type2

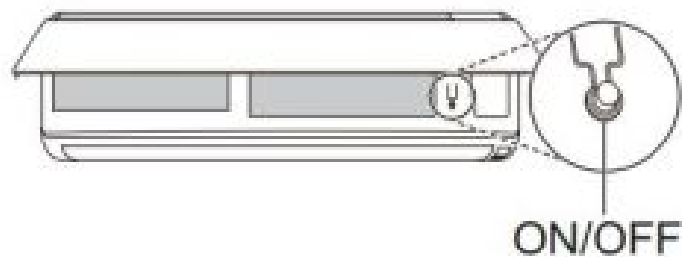










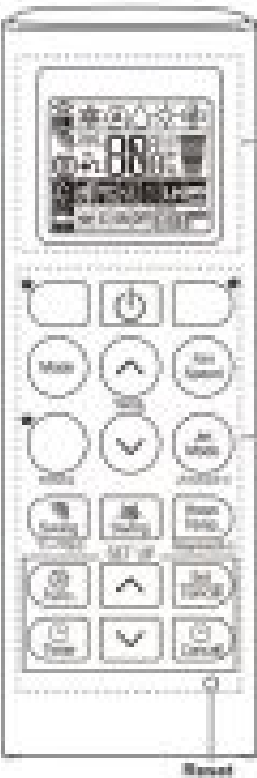


NOTE

- The stepping motor may be broken, if the horizontal vane opens rapidly.
- The fan speed is set to high.
- The feature may be changed according to the type of model.
- The temperature cannot be altered when using this emergency ON/OFF button.
- For cooling & heating models, the temperature is set from 22 °C to 24 °C

Using Wireless Remote Control


You can operate the air conditioner more conveniently with the remote control.

| | ① Button | ② Display Screen | Description | Available Function | |
|--|---|---|---|-----------------------|-----------------------|
| | | | | Single Split | Multi |
|  |  | - | To turn on/off the air conditioner. | <input type="radio"/> | <input type="radio"/> |
| |  | 88 ° | To adjust the desired room temperature in cooling, heating or auto changeover mode. | <input type="radio"/> | <input type="radio"/> |
| |  |  | To select the cooling mode. | <input type="radio"/> | <input type="radio"/> |
| | |  | To select the heating mode. | <input type="radio"/> | <input type="radio"/> |
| | |  | To select the dehumidification mode. | <input type="radio"/> | <input type="radio"/> |
| | |  | To select the fan mode. | <input type="radio"/> | <input type="radio"/> |
| | |  | To select the auto changeover/auto operation mode. | <input type="radio"/> | <input type="radio"/> |

| | | | | |
|---|---|--|-----------------------|-----------------------|
| Jet Mode | Po | To change room temperature quickly. | <input type="radio"/> | <input type="radio"/> |
| Fan Speed |  | To adjust the fan speed. | <input type="radio"/> | <input type="radio"/> |
|  |  | To adjust the air flow direction vertically or horizontally. | <input type="radio"/> | <input type="radio"/> |



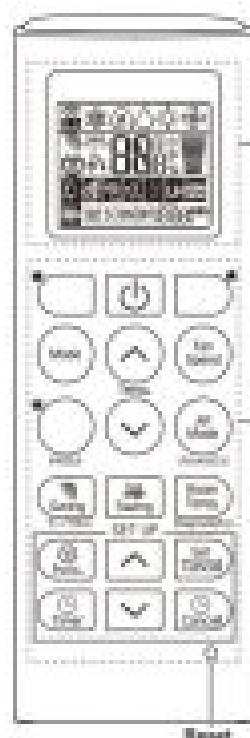

NOTE

- buttons may be changed according to the type of model.
- When connected to the Multi Outdoor unit, the Energy Display, Energy Control, Silent and Smart Diagnosis function may not be supported.



| ① Button | ② Display Screen | Description | Available Function | |
|--------------|------------------------|---|--------------------|-------|
| | | | Single Split | Multi |
| | | To turn on/off air conditioner automatically at desired time. | ○ | ○ |
| Set/Cancel | - | To set/cancel the special functions and timer. | ○ | ○ |
| | - | To cancel the timer settings. | ○ | ○ |
| | - | To adjust time. | ○ | ○ |
| *Light Off | - | To set the brightness of the display on the indoor unit. | ○ | ○ |
| Room Temp. | | To display the room temperature. | ○ | ○ |
| *C→*F (5 s) | *C *F | To change unit between °C and °F | ○ | ○ |
| *Comfort Air | | To adjust the air flow to deflect wind. | ○ | ○ |

| | | | | |
|-----------------|------|--|-----------------|-----------------|
| kW(3 s) | - | To set whether or not to display information regarding energy. | ○ | X |
| *Energy Ctrl. | 88 % | To bring the effect of the power saving. | ○ | X |
| Diagnosis (5 s) | - | To conveniently check maintenance information of a product. | ○ | X |
| UVnano (3 s) | - | To keep the fan clean. | ○ (Optional) | ○ (Optional) |

| 1 Button | 3 Display Screen | Description | Available Function | |
|---|---|---|--------------------|-----------------|
| | | | Single Split | Multi |
|  |  | The Ion generator uses millions of ions to help improve indoor air quality. | ○ (Optional) | ○ (Optional) |
| |  | To reduce noise from outdoor units. | ○ | X |
| |  | To remove moisture generated inside the indoor unit. | ○ | ○ |
| Reset | - | To initialize the remote control settings. | ○ | ○ |

NOTE

- Some functions may not be supported, depending on the model.
- buttons may be changed according to the type of model.
- Press the Set/Cancel button to operate the selected Func.


Restarting the Air Conditioner Automatically

When the air conditioner is turned on again after a power failure, this function restores the previous settings.


Disabling Auto Restart

1. Open the front cover (Type2) or horizontal vane (Type1).
2. Press the ON/OFF button and hold it for 6 seconds, then the unit will beep twice and the lamp will blink twice 4 times.
 - To re-enable the function, press the ON/OFF button and hold it for 6 seconds. The unit will beep twice and the lamp will blink 4 times.

Type1

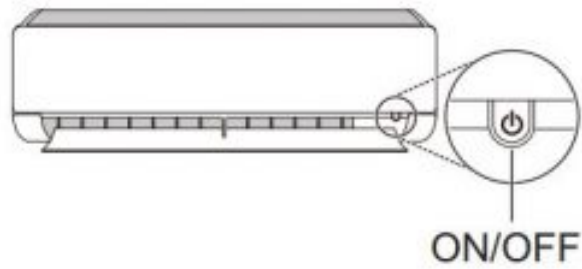

Type2

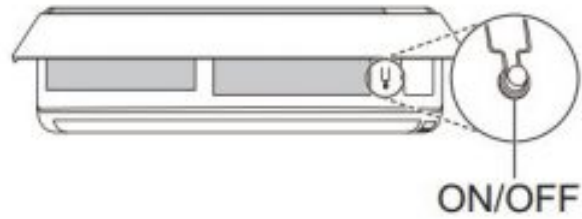


NOTE


- The feature may be changed according to the type of model.
- If you press and hold the ON/OFF button for 3 – 5 seconds, instead of 6 seconds, the unit will switch to the test operation. In the test operation, the unit blows out strong cooling air for 18 minutes and then returns to factory default settings.


Using the Mode Function

This function allows you to select the desired function.

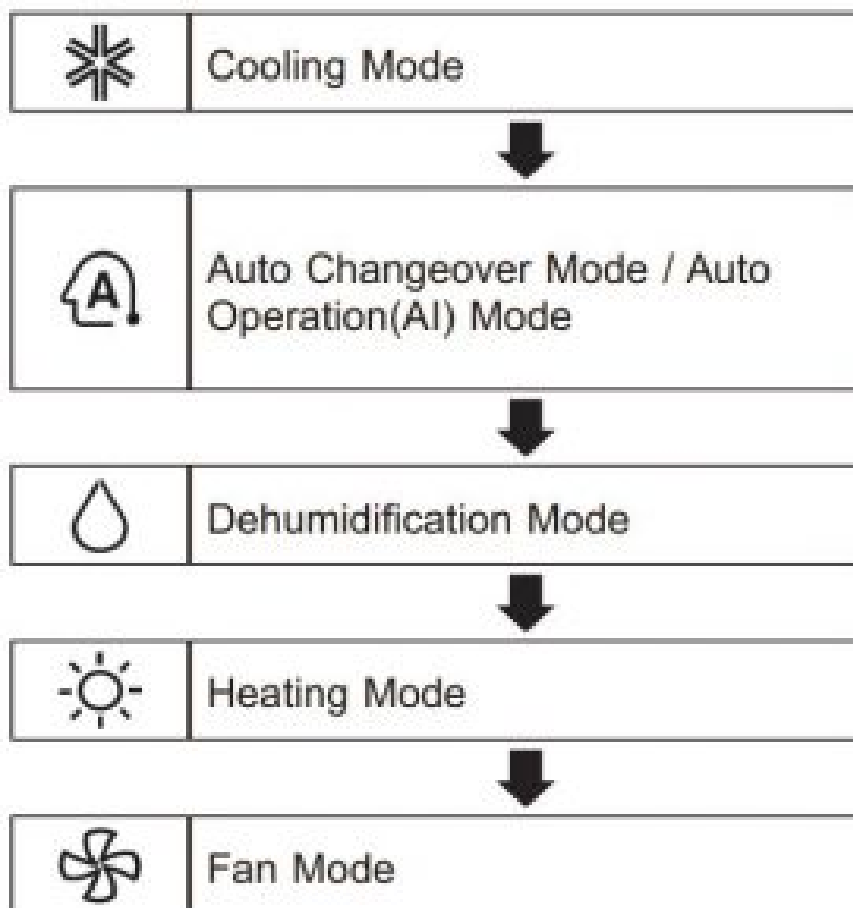

Cooling Mode

- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Cooling Mode.
 -  is displayed on the display screen.

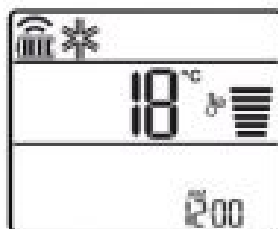


- 3 Press  or  button to set the desired temperature.



Auto Operation (Artificial Intelligence)

Multi Model

In this operation mode, the system is automatically operated by the electronic controls.

- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Auto Operation.
 -  is displayed on the display screen.




- 3 Press  or  button to set the desired temperature.
- 4 Press **Fan Speed** button to adjust the fan speed.

 

Auto Changeover Mode

Single Split Model

This mode changes the mode automatically to maintain the set temperature at $\pm 2^{\circ}\text{C}$


- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Auto Changeover Mode.
 -  is displayed on the display screen.




- 3 Press  or  button to set the desired temperature.
- 4 Press **Fan Speed** button to adjust the fan speed.

Dehumidification Mode

 This mode removes excess moisture from a highly humid environment or during the rainy season, in order to prevent mildew from setting in. This mode adjusts the room temperature and the fan speed automatically to maintain the optimal level of humidity.


- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Dehumidification Mode.
 -  is displayed on the display screen.

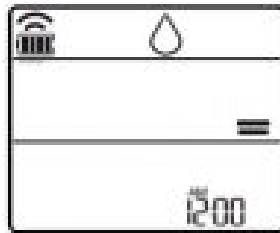

NOTE

- In this mode you cannot adjust the room temperature, it is adjusted automatically.
- The room temperature is not displayed on the display screen.
- In the dehumidification mode, compressor and indoor fan may not operate when the room temperature is below 24 °C

 Heating Mode

- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Heating Mode.
 -  is displayed on the display screen.



- 3 Press  or  button to set the desired temperature.


NOTE

- ❄️ will be displayed on the indoor unit when defrosting is operating.
- Furthermore, this indication will be displayed on the indoor unit:
 - When preheating is operating.
 - When the room temperature has been reached to the set temperature.

Fan Mode

This mode only circulates the indoor air without changing the room temperature.

- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the Fan Mode.
 - 🌀 is displayed on the display screen.

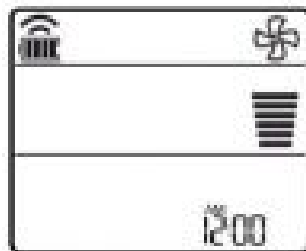

- 3 Press **Fan Speed** button to adjust the fan speed.

Using the Jet Mode Function

Changing Room Temperature Quickly





This function allows you to cool indoor air quickly during the summer or warm it quickly during winter.

- The Jet Mode function is available with Cooling, Heating and Dehumidification Mode.

- 1 Turn the appliance on.
- 2 Press **Mode** button repeatedly to select the desired mode.
- 3 Press **Jet Mode** button.
 - **P₀** is displayed on the display screen.








NOTE

- Jet Heating Mode is not available on some models.
- In Jet Cooling Mode, strong air blows out for 30 minutes.
- After 30 minutes later, setting temperature is maintaining 18 °C
If you want to change the temperature, Press  or  button to set the desired temperature.
- In Jet Heating Mode, strong air blows out for 30 minutes.
- After 30 minutes later, setting temperature is maintaining 30 °C
If you want to change the temperature, Press  or  button to set the desired temperature.
- This function may operate differently from the remote control display.

Adjusting the Fan Speed

Press Fan Speed button repeatedly to adjust the fan speed.

| Display Screen | Speed |
|---|---------------|
|  | High |
|  | Medium - High |
|  | Medium |
|  | Medium - Low |
|  | Low |
| - | Natural Wind |

NOTE

- The fan speed of Natural Wind adjusts automatically.







- The fan speed icons are displayed on some indoor units.

F1 → F2 → F3 → F4 → F5



- Indoor unit display is displayed only 5 seconds and return to the setting temperature on some models.

Using the Air Flow Direction Function

This function adjusts the direction of the air flow vertically (horizontally).

- Press  () button repeatedly and select the desired direction.
 - Select  () to adjust the direction of the air flow automatically.


NOTE

- Adjusting the air flow direction horizontally may not be supported, depending on the model.
- Adjusting the air deflector arbitrarily may cause product failure.
- If you restart the air conditioner, it starts to operate with the previously set direction of air flow, so the air deflector may not match the icon displayed on the remote control. When this occurs, press  or  button to adjust the direction of the air flow again.
- This function may operate differently from the remote control display.




Setting the On/Off Timer

This function sets the air conditioner to turn on/off automatically at desired time.
On/Off Timer can be set together.


Setting the On Timer

- 1 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.



- 2 Press  or  button to select the minutes.
- 3 Press **Set/Cancel** button to finish.
 - After setting the timer, current time and  icon are displayed on the display screen indicating that the desired time is set.


Canceling the On Timer

- 1 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.






- 2 Press **Set/Cancel** button to cancel the setting.

Setting the Off Timer

- 1 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.




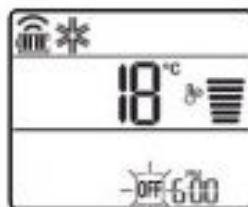
- 2 Press  or  button to select the minutes.
- 3 Press **Set/Cancel** button to finish.
 - After setting the timer, current time and  icon are displayed on the display screen indicating that the desired time is set.

NOTE

- This function is disabled when you set Simple Timer.


Canceling the Off Timer

- 1 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.




- 2 Press **Set/Cancel** button to cancel the setting.

Canceling the Timer Setting




- Press  button to cancel all timer settings.

Using the Sleep Function (Optional)


This function turns off the air conditioner automatically when you go to sleep.

- 1 Turn the appliance on.
- 2 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.




- 3 Press  or  button to select the hour (up to 7 hours).
- 4 Press **Set/Cancel** button to finish.
 -  is displayed on the display screen.


NOTE




-  is displayed on some indoor units.
- Indoor unit display is displayed from 1H to 7H which is displayed only 5 seconds and then return to the setting temperature.
- In the Cooling and Dehumidification Mode, the temperature increases by 1 °C after 30 minutes and additional 1 °C after another 30 minutes for a more comfortable sleep.
- The temperature increases up to 2 °C from the preset temperature.
- Although the remark for fan speed on the display screen may be changed, the fan speed is adjusted automatically.

Using the Simple Timer Function (Optional)

This function turns off the air conditioner automatically when you go to sleep.

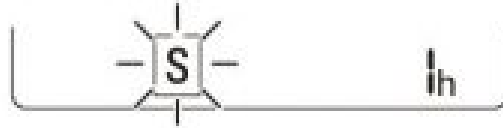- 1 Turn the appliance on.
- 2 Press  button repeatedly.
 - The icon below blinks at the bottom of the display screen.



- 3 Press  or  button to select the hour (up to 7 hours).
- 4 Press **Set/Cancel** button to finish.
 -  is displayed on the display screen.



NOTE

- This function is disabled when you set Off Timer.

Using the Energy Display Function (Optional)

This function displays the amount of electricity generated on the indoor display as the product operates.

Display the Current Energy Usage

- 1 Turn the appliance on.
- 2 Press  button and hold it about 3 seconds.
 - The instantaneous power consumption () is displayed for a while on some indoor units.

NOTE

- The unit of the displayed value is kW.

- It is not displayed on the wireless remote control.
- If it is more than 99 kW, which is the range of expression, maintain it as 99 kW.
- Display wattage under 10 kW with 0.1 kW unit, and display one over 10 kW with 1 kW unit.
- The actual power may differ from the power displayed.
- When connected to the Multi Outdoor unit, this function may not be supported.

Using the Light Off Function (Optional)

Display Screen Brightness

You can set the brightness of the indoor unit display screen.

- Press Light Off button.

NOTE


- Turn on/off the Display screen.

Using the Comfort Air Function (Optional)




Comfort Vane Operation

This function conveniently sets the vane to a preset position to deflect the supply air away from blowing directly onto the occupants in the room.

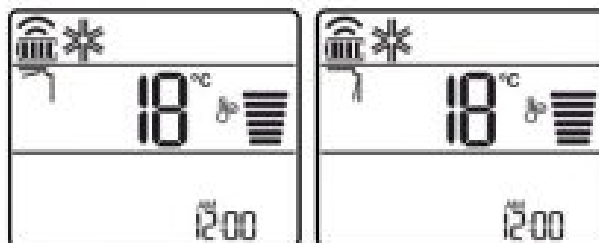- 1 Turn the appliance on.
- 2 Press **Comfort Air** button repeatedly and select the desired direction.
 -  or  is displayed on the display screen.



NOTE






 

-  or  is displayed on some indoor units.
- This function is disabled when you press **Mode** or **Jet Mode** button.
- This function is disabled and auto swing of vertical direction is set up when you press  button.
- When this function is off, the horizontal vane operates automatically depending on the set mode.

Using the Energy Control Function (Optional)

1. Turn the appliance on.
2. Press Energy Ctrl button.
 - Press Energy Ctrl button repeatedly to select each step.

| 1 step | 2 step | 3 step |
|--|--|--|
|   80 %   |   60 %   |   40 %   |

NOTE

- 1 step : The power Input is decreased by 20 % compared to rated power input.
–  **80** % is displayed on the display screen.
- 2 step : The power Input is decreased by 40 % compared to rated power input.
–  **60** % is displayed on the display screen.
- 3 step (Optional) : The power Input is decreased by 60 % compared to rated power input.
–  **40** % is displayed on the display screen.
- **80** (1 step), **60** (2 step), **40** (3 step) is displayed on some indoor units.
( (1 step),  (2 step) is displayed on some indoor units.)
- This function is available with Cooling Mode.
- Capacity may decrease when Energy Control mode is selected.
- Desired temperature is displayed about 5 seconds if you press **Fan Speed**,  or  button.
- Room temperature is displayed about 5 seconds if you press **Room Temp** button.
- When connected to the Multi Outdoor unit, this function may not be supported.

Using UVnano Function (Optional)

UVnano is a compound word of UV (ultraviolet rays) and nanometer (length unit).
This function reduces various bacteria inside the air conditioner.

Model name: LTPL-G35UV275GS-JA
LTPL-G35UV275GS-TWA
CUD7GF1A


Press Jet Mode button and hold it about 3 seconds.

NOTE

- UV is displayed on some indoor units, depending on the model.
- The UV LED operates at regular intervals to keep the fan clean.
- The UVnano function stops when the air conditioner is turned off.
- When Auto Clean Function starts, UVnano Function works together to keep the fan clean.
- This function is disabled with Heating Mode.

Using Special Functions

1. Turn the appliance on.
2. Press Func button repeatedly to select the desired function.
3. Press Set/Cancel button to finish.

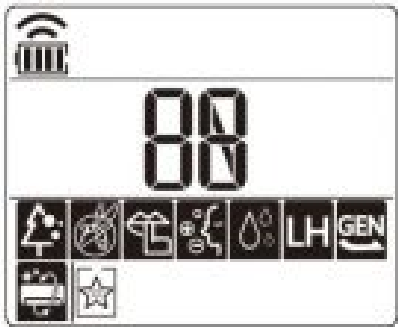

| Display Screen | Description |
|----------------|---|
| | The Ion generator uses millions of ions to help improve indoor air quality. |
| | To reduce noise from outdoor units. |
| | To remove moisture generated inside the indoor unit. |

NOTE


- Some functions may not be supported, depending on the model.
- Some functions may operate differently from the remote control display.

Canceling Special Functions

1. Press Func button repeatedly to select the desired function.
2. Press Set/Cancel button to cancel the function.

Using the Air Purification Function

These functions supply clean and fresh air by ion particles and the filter.


| Function | Display | Description |
|----------------|---|---|
| Ionizer |  | Ion particles from Ionizer reduce the surface bacteria and other harmful substances. |
| Plasma | | It removes microscopic contaminants from the intake air completely to supply clean and fresh air. |

NOTE

- You can use this function without turning the air conditioner on.
- Both the plasma lamp and the cooling lamp light up while Smoke Away/Plasma is in operation on some models.
- Do not touch ionizer during operation.
- This function may operate differently from the remote control display.

Using the Silent Function

This function prevents potential claims by neighbors, reducing noise from outdoor units.

-  is displayed on the display screen.




NOTE

- This function is disabled when you press Mode or Energy Ctrl or Jet Mode button.
- This function is available with Cooling, Heating, Auto Changeover, Auto Operation Mode.
- When connected to the Multi Outdoor unit, this function may not be supported.


Using the Auto Clean Function

In the Cooling and Dehumidification Mode, moisture is generated inside the indoor unit. This function removes such moisture.

-  is displayed on the display screen.




NOTE

- Some functions cannot be used while the Auto Clean function is in operation.
- When UVnano Function is set, Auto Clean Function works together.
- If you turn off the unit, the fan continues to run for 30 minutes and cleans the inside of the indoor unit.
-  is displayed on some indoor units, depending on the model.

SMART FUNCTIONS

LG ThinQ Application

This feature is only available on models with the  or ThinQ logo.

The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Smart Diagnosis

If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

Settings

Allows you to set various options on the appliance and in the application.


NOTE

- If you change your wireless router, internet service provider, or password, delete the registered appliance from the LG ThinQ application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.


Before Using LG ThinQ Application

1. Check the distance between the appliance and the wireless router (Wi-Fi network).
 - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.

- 2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.

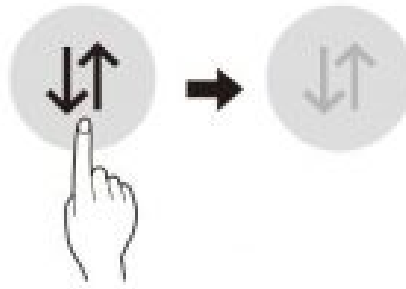

- 3 Connect your smartphone to the wireless router.

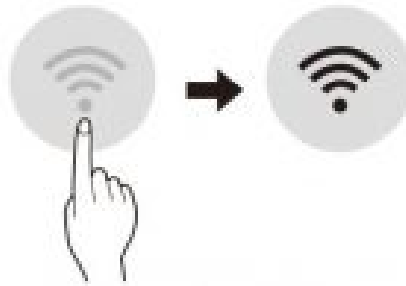

NOTE

- To verify the Wi-Fi connection, check that icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- LG ThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to WEP, you may fail to set up the network. Please change it to other security protocols (WPA2 is recommended) and register the product again.

Installing the LG ThinQ Application

Search for the LG ThinQ application from the Google Play Store or Apple App Store on a smartphone. Follow instructions to download and install the application.



Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <https://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Smart Diagnosis

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

Using LG ThinQ to Diagnose Issues



If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the LG ThinQ application.

- Launch the LG ThinQ application and select the Smart Diagnosis feature in the menu. Follow the instructions provided in the LG ThinQ application.

Using Audible Diagnosis to Diagnose Issues

Follow the instructions below to use the audible diagnosis method.

- Launch the LG ThinQ application and select the Smart Diagnosis feature in the menu. Follow the instructions for audible diagnosis provided in the LG ThinQ application.

- 1 Plug the power plug in the outlet properly.
- 2 Place the mouthpiece of your smartphone close to the  or  logo.
- 3 Press and hold the **Diagnosis(5 s)** button for 5 seconds or longer while holding the smartphone mouthpiece to the logo until the data transfer is complete.
 - Keep the smartphone in place until the data transfer has finished. Time remaining for data transfer is displayed.
- 4 After the data transfer is complete, the diagnosis will be displayed in the application.

NOTE

- For best results, do not move the phone while the tones are being transmitted.
- Be sure to keep ambient noise to a minimum or the phone may not correctly receive the buzzer beeps from the indoor unit.

MAINTENANCE




WARNING

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition. Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

- Dry the air conditioner in Fan mode for 3 to 4 hours and disconnect the power. There may be internal damage if moisture is left in its components.
- Before using the air conditioner again, dry the inner components of the air conditioner in Fan mode for 3 to 4 hours. This will help to remove the odor generated from moisture.

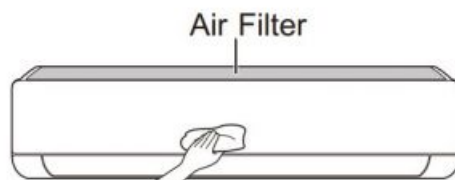

- The feature may be changed according to the type of model.

| Type | Description | Interval |
|--------------------|--|----------------|
| Air filter | Clean with a vacuum or hand wash. | 2 weeks |
| Ionizer (Optional) | Use dry cotton bud to remove any dust. | Every 6 months |
| Indoor unit | Clean the indoor unit surface by using a soft, dry cloth. | Regularly |
| | Have a professional clean the condensate drain pan. | Once a year |
| | Have a professional clean the condensate drain pipe. | Every 4 months |
| | Replace the remote control batteries. | Once a year |
| Outdoor unit | Have a professional clean the heat exchanger coils and the panel vents. (Consult with technician.) | Once a year |
| | Have a professional clean the fan. | Once a year |
| | Have a professional clean the condensate drain pan. | Once a year |
| | Have a professional verify that all the fan assembly is firmly tightened. | Once a year |
| | Clean the electric components with air. | Once a year |

NOTE

- Never use water that is higher than 40 °C when you clean the filters. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filters. They may damage the surface of the product.

Clean the Air Filter

Clean the air filters once every 2 weeks, or more, if necessary.


NOTE

- The air filter can be broken when it is bent.
- When the air filter is not assembled correctly, dust and other substances can enter into the indoor unit.


Type1

If you look at the indoor unit from above it, can assemble the top filter easily.


- 1 Turn off the power to the unit.
- 2 Hold the knobs of the air filter, lift it up slightly.

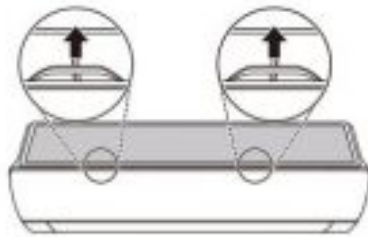


- 3 Remove it from the indoor unit.

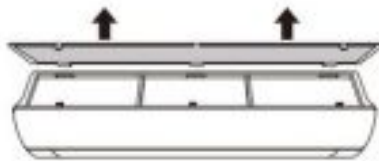

- 4 Clean the filter with a vacuum cleaner or with lukewarm water with neutral detergent.
- 5 Dry the filter in the shade.
- 6 Insert the hooks of the air filter into the front cover.

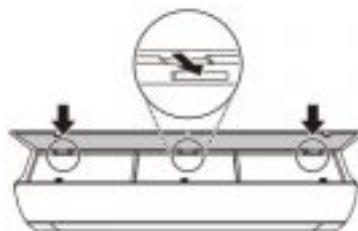


- 7** Push down hooks to assemble the air filter.

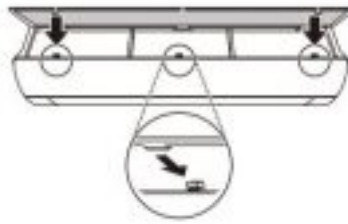


- 8** Check the side of the front cover for correct assembly of the air filter.

Type2

- 1** Turn off the power to the unit.
- 2** Open the front cover.
- Lift up both sides of the cover slightly.
- 3** Hold the knobs of the air filters, pull them down slightly and remove them from the indoor unit.

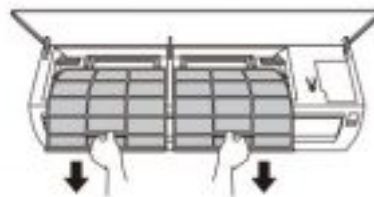

- 4** Clean the filters with a vacuum cleaner or with lukewarm water with neutral detergent.
- 5** Dry the filters in the shade.
- 6** Insert the hooks of the air filters into the front cover.

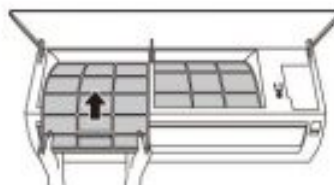

- 7** Check the side of the front cover for correct assembly of the air filters.

TROUBLESHOOTING

Self-diagnosis Function

This product has a built-in self-diagnosis function. If an error occurs, the lamp of the indoor unit will blink in 2 second intervals. If this occurs, contact your local dealer or service center.

Before Calling for Service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

| Symptoms | Possible Causes & Solution |
|---|---|
| The air conditioner does not work normally. | Burning smell and strange sounds are coming from the unit. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | Water leaks from the indoor unit even when the humidity level is low. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | The power cable is damaged or it is generating excessive heat. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | A switch, a circuit breaker (safety, ground), or a fuse is not operated properly. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | The unit generates an error code from its self-diagnosis. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |

| Symptoms | Possible Causes & Solution |
|---|---|
| The air conditioner does not work normally. | Burning smell and strange sounds are coming from the unit. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | Water leaks from the indoor unit even when the humidity level is low. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | The power cable is damaged or it is generating excessive heat. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | A switch, a circuit breaker (safety, ground), or a fuse is not operated properly. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |
| | The unit generates an error code from its self-diagnosis. • Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center. |

| Symptoms | Possible Causes & Solution |
|---|--|
| The air conditioner does not emit cool air. | Air is not circulating properly. <ul style="list-style-type: none"> • Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the air conditioner. |
| | The air filter is dirty. <ul style="list-style-type: none"> • Clean the air filter once every 2 weeks. • See "Clean the Air Filter" for more information. |
| | The room temperature is too high. <ul style="list-style-type: none"> • In summer, cooling the indoor air fully may take some time. In this case, select the Jet Mode to cool the indoor air quickly. |
| | Cold air is escaping from the room. <ul style="list-style-type: none"> • Make sure that no cold air is escaping through the ventilation points in the room. |
| | The desired temperature is higher than the current temperature. <ul style="list-style-type: none"> • Set the desired temperature to a level lower than the current temperature. |

| | |
|--|--|
| | There is a heating source nearby. <ul style="list-style-type: none"> • Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation. |
| | Fan Mode is selected. <ul style="list-style-type: none"> • During Fan Mode, air blows from the air conditioner without cooling or heating the indoor air. • Switch the operation mode to cooling operation. |
| | Outside temperature is too high. <ul style="list-style-type: none"> • The cooling effect may not be sufficient. |
| The fan speed cannot be adjusted. | The Jet Mode, or Auto Operation Mode is selected. <ul style="list-style-type: none"> • In some operation modes, you cannot adjust the fan speed. Select an operation mode in which you can adjust the fan speed. |
| The temperature cannot be adjusted. | The Fan Mode or Jet Mode is selected. <ul style="list-style-type: none"> • In some operation modes, you cannot adjust the temperature. Select an operation mode in which you can adjust the temperature. |

| | |
|---|---|
| The air conditioner stops during operation. | The air conditioner is suddenly turned off. <ul style="list-style-type: none"> • The Timer Function may have timed out, which turns the unit off. Check the timer settings. |
| | A power failure has occurred during operation. <ul style="list-style-type: none"> • Wait for the power to come back. If you have the Auto Restart function enabled, your unit will resume its last operation several minutes after power is restored. |

| Symptoms | Possible Causes & Solution |
|--|--|
| The indoor unit is still operating even when the unit has been turned off. | The Auto Clean function is being operated. <ul style="list-style-type: none"> Allow the Auto Clean function to continue since it removes any remaining moisture inside the indoor unit. If you do not want this feature, you can turn the unit off. |
| The air outlet on the indoor unit is discharging mist. | The cooled air from the air conditioner makes mist. <ul style="list-style-type: none"> When the room temperature decreases, this phenomenon will disappear. |
| Water leaks from the outdoor unit. | In the heating operations, condensed water drops from the heat exchanger. <ul style="list-style-type: none"> This symptom requires installing a drain hose under the base pan. Contact the installer. |
| There is noise or vibration. | A clicking sound can be heard when the unit starts or stops due to movement of the reversing valve. Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes. Flowing or Blowing sound: This is the flow of refrigerant through the air conditioner. <ul style="list-style-type: none"> These are normal symptoms. The noise will stop. |


| | |
|---|--|
| The indoor unit gives off an odor. | Odors (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow. <ul style="list-style-type: none"> If the smell does not disappear, you need to wash the filter. If this does not work, contact the service center to clean your heat exchanger. |
| The air conditioner does not emit warm air. | When Heating Mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating. <ul style="list-style-type: none"> This symptom is normal. Please wait until the unit has generated enough warm air to blow through the indoor unit. |
| | The outdoor unit is in Defrosting Mode. <ul style="list-style-type: none"> In Heating Mode, ice/frost is built up on the coils when the outside temperature falls. This function removes a layer of frost on the coil, and it should finish in approximately 15 minutes. |
| | Outside temperature is too low. <ul style="list-style-type: none"> The heating effect may not be sufficient. |

NOTE

- Some functions may not be supported, depending on the model.

Read More About This Manual & Download PDF:

Documents / Resources

| | |
|--|---|
|  <p>OWNER'S MANUAL AIR CONDITIONER</p> <p>TYPE WALL MOUNTED</p> <p>Model numbers: MFL69780820</p> <p>Copyright © 2015 LG Electronics Inc.</p> | LG Wall Mounted Air Conditioner [pdf] Owner's Manual Wall Mounted Air Conditioner, MFL69780820 |
|--|---|

References

-  [LG Open Source](#)

Manuals+.